

Operating Instructions & Safety Manual



Hydraulic Rotating Jack

**Rated Capacities
5 through to 25 tonne**

**Note: Operator must read and fully
understand the operating instructions
before using this product.**

Products supplied comply with the essential health & safety requirements of the Machinery Directive 2006/42/EC, the Supply of Machinery (Safety) Regulations 2008 and the Health & Safety at Work etc Act 1974 section 6.

George Taylor & Company maintain a policy of progressive development of products and reserve the right to alter, without notice, the specifications shown within this manual.

www.gtlifting.co.uk

George Taylor & Company Lifting Gear (Midlands) Ltd.
Unit 4, Fryers Road, Walsall WS2 7LZ UK

T +44 (0)1922 490220 **F** +44 (0)1922 490229 **E** office@gtlifting.co.uk

Safety Information



CONTENTS

Warnings	2
Specifications	2
Transporting & Storing	4 - 5
Installation	6 - 7
Operation	8
Maintaining	9 - 12
Adding Oil	13
Troubleshooting Guide	14
Spare Parts List	15

SIGNAL WORDS

Note use of the following signal word **WARNING** with safety messages. The appropriate signal word for each has been selected using the following guidelines:

WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.

Replace any Caution, Warning, Danger or Instruction safety label that is not readable or is missing.

Do not attempt to operate this equipment under the influence of alcohol or drugs. Review safety instructions with all users.

Operator should be a competent person. **DO NOT ALLOW PERSONS TO OPERATE OR ASSEMBLE THIS UNIT UNTIL THEY HAVE DEVELOPED A THOROUGH UNDERSTANDING OF SAFETY PRECAUTIONS AND HOW IT WORKS.**

WARNINGS

The GT Hydraulic Rotating Jack shall only be operated by qualified personnel.

WARNING

The safe use of this jack should follow every point described in this manual, otherwise the injury of operators or damage of articles might be caused because of neglect or misuse of this jack.

Before operation, the operator should check and confirm that the jack is in good state.

WARNING

GT holds no responsibility for the change of mechanical properties which are caused directly or indirectly from maintenance by a third party, without written permission from GT.

SPECIFICATIONS

This box includes:

- GT Hydraulic Rotating Jack
- Spare Parts bag
- This manual


Capacity	Lifting range of Toe	Lifting range of head	Weight
kgs	mm	mm	kgs
5,000	25 - 230	368 - 573	20
10,000	30 - 260	420 - 650	35
25,000	58 - 273	505 - 720	100

Operation



SCOPE OF USE

When using this jack, place it on a stable, solid surface, such as a reinforced concrete floor, to lift or move heavy items either vertically or horizontally. To lift items within the limited range of the jack, you may place auxiliary pads under its base. Ensure the jack's tooth plate (43) is positioned on the base so it can fold inward when compacting the jack.

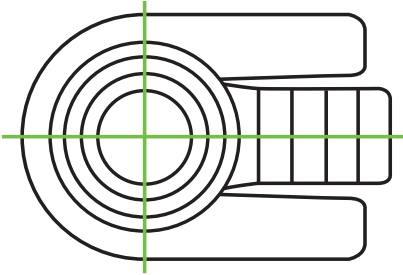

METHOD OF OPERATING

LIFTING

Position the toe underneath the load, ensuring the load is at the back of the toe plate so as not to lift on the tip. Insert the handle tightly by screwing clockwise into the socket.

Using a steady up and down movement of the handle repeatedly to pump the pressure to the lift the load. The lifting movement can be stopped immediately by stopping the operating handle.

LOWERING

Screw out the unload handle slowly in anticlockwise direction to reduce the load step by step. When the jack is in unloaded condition, the head of it should be pressed to reduce its height.

NOTE:

Unless the jack is undergoing maintenance, the only part that should be dismantled when not in use should be the operating handle.

SAFETY STANDARD



- The lifting of the load is a dangerous operation, the appointed operators should be trained and competent.
- Never add extra weight to the load being lifted.
- Never exceed the rated capacity of the jack.
- Please keep a safe distance from the lifted load.
- Never use the jack if it's in a bad condition.
- When lifting the weight by toe plate, please keep the weight close to the head of the jack to avoid the jacks pillar being bent.
- Ensure that each support point of ground is solid and stable, including floor area and loading etc, then any type of operating should be handled on a plane surface only.
- Please guarantee the lifted weight is stable during the whole lifting period to avoid it being turned over or slipping. Each device shall be fixed before lifting.
- Never operate the jack when people are on the load.
- never use the front end of the toe plate to lift weight. The toe plate should be located in its base, the pushing point to the weight should close to the back end of toe plate as far as possible.
- Never screw the adjustable screw (18), under any circumstance otherwise you can risk the jack dropping. These parts (10,11,18,19,20,21) are the device of overloading protection.

Operation & Maintenance



SAFETY STANDARD (cont'd)

- Never use the side of jacks head to lift weight. The weight should be contacted with the black shadow surface of the following pictures.

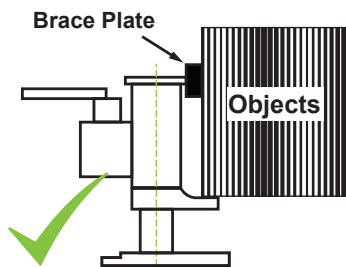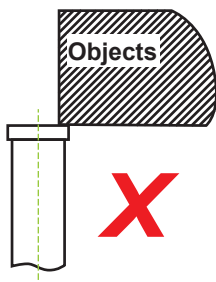

- Operators should be very careful to use different jacks to lift a heavy-duty weight. Pay attention to the shifting centre of gravity during lowering or lifting of the load. The total lifting capacity of all jacks should be larger than load of the lifted weights.
- The owner of jack should guarantee all of the stick labels concerning safety standards remain on its relative locations, which should be replaced when they cannot be read clearly.
- The operation manual can not cover all situations, please follow each step cautiously.

MAINTENANCE

ROUTINE INSPECTION:

Before operation, please inspect and confirm:

1. All of the stoppers and screws of jack have been screwed up properly. Take care to ensure they are not under or over tightened.
2. There is no oil leaking on the jacks pump.
3. There is no cracking or deformation on pump body, toe plate and it's base.
4. The pump should be operated normally without load.

Under more frequent use of the jack, periods of checking shall be reduced and the following checking points shall be emphasised:

1. All of the jacks stoppers, screws and nuts should be screwed up sufficiently and should be adjusted when it is necessary.
2. When the jack is in loading state, please pump it fully until the release valve opens and without any oil leaking (oil spot on the surface of pillar or valve stem is normal). Please release the pressure of pump and check the pillar to confirm the pillar being flat and vertical without any shocking and scraping. if any damage is, take out of service and refer back to the manufacturer for a pillar change.
3. When the jack is reducing, operator should check whether the reducing movement is stable or not and it should be wedged (but some slight vibration is normal).
4. Please carefully check all exterior parts of the jack including:
 - Pump body; no deformation, cracking or impact on it.
 - Operating handle of pump: no deformation, no over space in each plug, otherwise the old plug shall be replaced by a new one.
 - Toe plate: no deformation or cracking.
 - Base: no deformation or cracking.

Trouble Shooting



ADDING OIL

- 1. If the jack cannot be pumped up to its rated height, it is necessary for you to add hydraulic oil into the oil tank. The hydraulic oil to be used must have a quality of ISO VG22 or equivalent. Mixing of different fluids is prohibited!

Symptom	Possible cause	Solution
Jack cannot be pumped correctly	The release valve is open	1. Screw in the handle (16) tightly clockwise. 2. Loosen the screw (38) to release air from the pump then screw it back tightly.
Jack cannot be released down at the top position	The release valve is not open enough	Screw out the handle (16) counterclockwise
Jack cannot be pumped up to its maximum height.	Insufficient oil amount.	Remove screw (10) and add sufficient oil.
Oil is leaking from the plunger	Seals are worn out	Replace the worn seals (7) & (8)

Spare Parts List




No.	Name	Part Code		Qty
		5t	10t	
1	Handle Grip	501	501	1
2	Handle	502	502	1
3	Snap Ring	503	503	6
4	Socket	504	504	1
5	Pin	505	505	2
6	Plunger	506	506	1
7	Wiper	507	507	1
8	Back-Up Ring	508	508	2
9	O-Ring	509	509	2
10	Screw	510	510	1
11	Gasket	511	511	3
12	Ball	512	512	1
13	O-Ring	513	513	1
14	Release Rod	514	514	1
15	Snap Ring	515	515	1
16	Unload Handle	516	516	1
17	Pin	517	517	1
18	Adjusting Screw	518	518	1
19	Spring	519	519	1
20	Ball Seat	520	520	1
21	Ball	521	521	1
22	Linkage	522	522	1
23	Screw	523	523	4
24	Pin	524	524	1

No.	Name	Part Code		Qty
		5t	10t	
25	Ball	525	525	3
26	Spring	526	526	2
27	Screw	527	527	2
28	Pump Body	528	528	1
29	O-Ring	529	529	2
30	Y-Ring	530	530	1
31	O-Ring	531	531	1
32	Valve Stem Bush	532	532	1
33	Oil Pipe	533	533	1
34	Retaining Ring	534	534	1
35	Filter	535	535	1
36	Flexible Bag	536	1036	1
37	Screw	537	537	1
38	Cylinder Assemble	538	1038	1
39	Steel Wire	539	1039	1
40	O-Ring	540	1040	1
41	Retaining Ring	541	1041	2
42	Bush	542	1042	2
43	Forked Mounting	543	1043	1
44	Y-Ring	544	1044	2
45	Snap Ring	545	1045	2
46	Limit Block	546	1046	1
47	Pillar	547	1047	1
48	O-Ring	548	1048	1

	Name	Qty
*	Seal Kits: 07#, 08#, 09#, 11#, 13#, 29#, 30#, 31#, 40#, 44#, 48#	1

Spare Parts Diagram

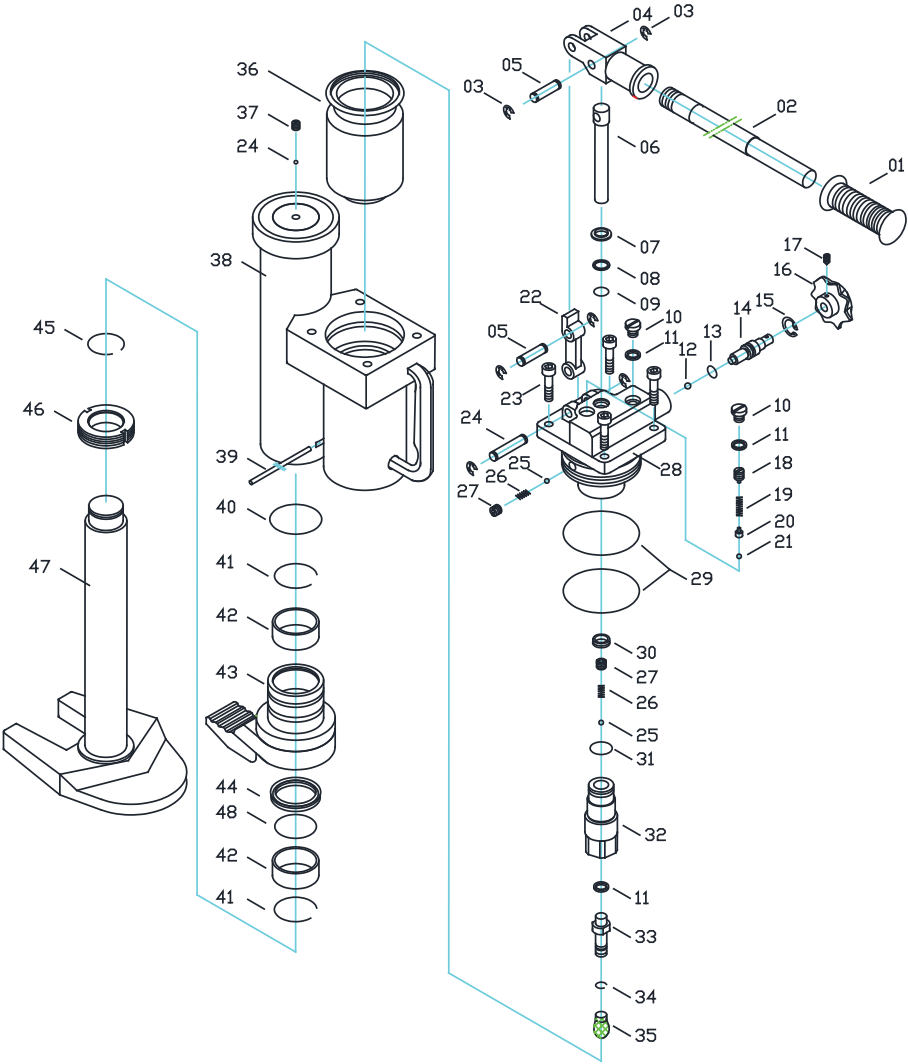

www.gtlifting.co.uk

George Taylor & Company Lifting Gear (Midlands) Ltd.

Unit 4, Fryers Road, Walsall WS2 7LZ UK

T +44 (0)1922 490220 **F** +44 (0)1922 490229 **E** office@gtlifting.co.uk